





Refill Instructions CANON® PGI-5BK and CLI-8 cartridges

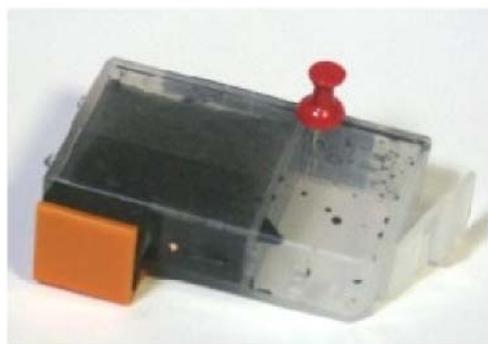

The Canon® ink cartridges PGI-5BK and CLI-8 have a chip and an LED. Nevertheless you know also these ink cartridges themselves refill! At the beginning of somewhat uncommon are the four driver messages from the printer on the screen. The refilled cartridge is recognized by the printer as not original, one follows the instructions at the monitor and can nevertheless further print. Details see below and back!

Thus refill you the ink

Put an old newspaper on the table and prepare you for 2 - 3 strips - 3 to ever approx... 6 cm good tape, insulating tape or hot a sticking pistol forwards. Lock the cartridges with the small original catch or use you for the settled, new, oranges plug (see photo right above).

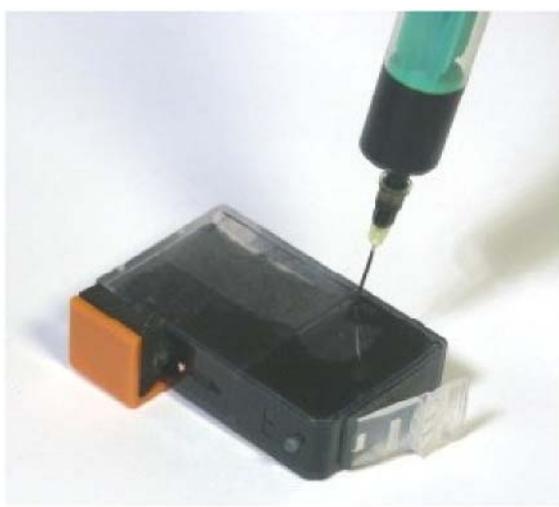



Inkjet Refilling Instruction

Bore with a needle (e.g. pin wall needle or the enclosed "jetty cerium") a small hole whole above into the corner of the ink store (see photo right above).

Deburr the hole carefully with a measurer. It may not be to fill collection. Fill first refuel-hurry slowly as fully as possible. Take then the cartridge into the hand and hold you them with the discharge opening first 90 to degrees perpendicularly upward and fill you with the syringe so the store fully. Then you turn the cartridge slowly approx. 45 degrees diagonally back and fill the store again as fully as possible up to the hole. Amount of filling with completely empty cartridges: **PGI-5BK black 26 ml, CLI-8 cartridges: all colors 13 ml.**

The stores should be as completely as possible full, if you seal the filler hole after filling again! Stick now immediately several layers tape cross and crosswise transferred over the hole. This must be locked really absolutely hermetically, otherwise the cartridge pulls to there late air and runs out! Still better: They can lock the hole also with a drop hot adhesive! Turn now the cartridge in such a way that the outlet shows downward. Note: the sponge absorbs now possibly very fast far ink from the store. It is normal that then refuel-hurry perhaps only more approx. to the half or 2/3 is full.

Remove carefully the catch at the ink discharge opening down. Hold the cartridge with the discharge opening over the still open ink bottle. If you should have filled the cartridge very fully, they drip possibly still approx. to 3 minutes out. That stops, if you sealed the refilling hole absolutely hermetically and thereby the correct negative pressure in the cartridge inside automatically again constructed yourselves. Only if the cartridge does not drip any longer, insert it into the printer, start you the cleaning program and print you 2 - 3 sides.


The messages from the printer on the monitor



The printer does not recognize the cartridge correctly.



Canon iP4200 - USB001

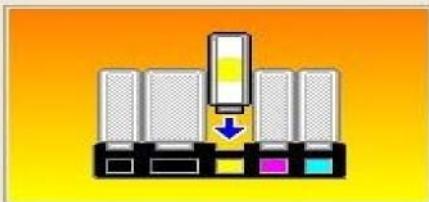

Es wurde ein wieder aufgefüllter Tintenbehälter eingesetzt.
Wenn unter diesen Bedingungen gedruckt wird, kann der Drucker beschädigt werden.
Wenn Sie den Druckvorgang fortsetzen möchten, klicken Sie auf "Ja". Bei diesem Vorgang wird die Funktion zur Erkennung des Tintenstands aktiviert.


Ja

Zurück

Druckvorgang abbrechen

The printer recognizes the refilled cartridge.

Canon iP4200 - USB001

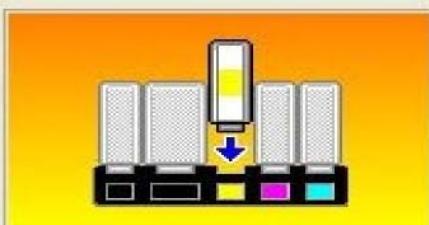

Canon übernimmt keine Haftung für Fehlfunktionen oder Schäden des Druckers, die durch die Verwendung wieder aufgefüllter Tintenbehälter entstehen.
Die Verwendung von wieder aufgefüllten Tintenbehältern wird erkannt.
Druckvorgang fortsetzen?


Ja

Zurück

Druckvorgang abbrechen

Canon does not take over adhesion for damage.

Canon iP4200 - USB001

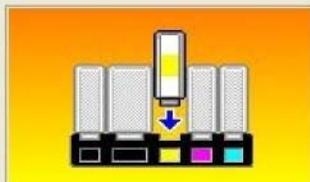

Halten Sie die Taste "FORTSETZEN" mindestens 5 Sekunden lang gedrückt.

Bei diesem Vorgang wird die Funktion zur Erkennung des Tintenstands der folgenden Tinte aktiviert.
Gelb [8]

Zurück

Druckvorgang abbrechen

The key "CONTINUING" is the form feed key on your printer!

Attention - important: In the text of the driver messages at the screen is a large translation error! Where "the function stands here for the recognition of the ink conditions of the following ink activated" must it correct-proves to be called - and it means also - "...wurde deactivated." Because after mind. 5 sec. press the key "CONTINUING" at the printer are completely switched thereby the ink condition announcement off (deactivated) and the printer



Inkjet Refilling Instruction

indicates with the refilled cartridge no ink conditions to you, continues to print however problem-free!

Refill you therefore the cartridges absolutely regularly, thus they to be never completely empty printed and observed you in each case the print format and by the transparent cartridge body the level in the cartridges! Do it in particular before larger and longer pressure jobs. As soon as you see pale expressions, absolutely immediately refill! They destroy otherwise inevitably the print head (no guarantee and no warranty of us or Canon).

*Tests done on Canon® Pixma iP4200, cartridges PGI-5BK; CLI-8BK; CLI-8C; CLI-8M; CLI-8Y; Windows® XP Professional – XP2/German.