

Refill Instructions

Epson T0422; T0423; T0424;

1. Turn the cartridge upside down and using a pointed object, such as a paper clip, pierce through the label into the cartridge of the proper filling hole (as shown).



2. Attach the needle to the syringe and fill with the correct color ink.
3. Push needle through the label and about 3/8" into the cartridge. Inject approximately 5-7 ml of ink slowly into the filling hole until the cartridge is almost full. Unused ink may be returned to the bottle.

4. Apply included tape dot over the filling hole, making certain that the filling hole is completely sealed.



5. Rinse the syringe with water and dry for further use, or use with a different color ink.
6. Follow the resetting instructions for inserting cartridge into printer.

Note: Immediately refill any empty cartridges.

