


Refill Instructions

Canon BC-11e; BCI-11Bk; BCI-11C;

1. To access the filling hole, remove the cartridge label.
2. Enlarge the filling hole with the enclosed hole making tool.

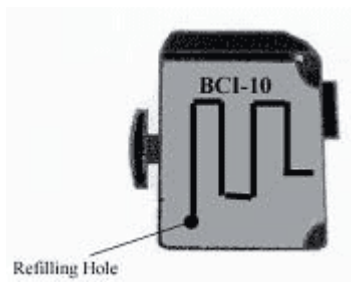

Note : *You may feel a slight pressure as the cartridge contains a sponge.*

3. Attach needle to syringe and fill with appropriate color ink.
4. Slowly inject up to 7 ml of ink into the cartridge.

Note: *The needle must not be inserted more than 1/4" (6mm) into the cartridge!*

5. Rinse the syringe with water and dry for future use, or use with a different color ink.
6. Reinsert the cartridge and run a priming cycle as per printer instructions.

Note: *Immediately refill any empty cartridges.*