


Refill Instructions

Canon BCI-21Bk

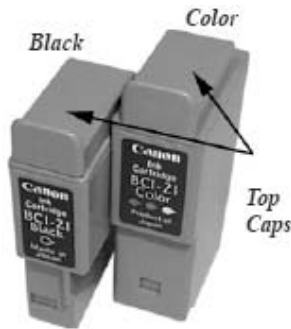

1. Remove the top of cartridge(s) using a penknife.
2. Using the eyelet screw provided enlarge the filling hole(s) in the top of the cartridge(s).
3. Attach the needle to the syringe and fill with the appropriate color ink.
4. Insert the syringe through the appropriate filling hole, (See diagram for filling hole color) and push into the center of the cartridge.

Note: You may feel a slight pressure because the cartridge contains a sponge.



5. Slowly inject up to 5 ml of ink, per chamber into the cartridge. Some ink may overflow from the filling and outlet holes when full.
6. Replace the top and secure with adhesive tape.
7. Unused ink may be returned to the bottle. Rinse the syringe with water and dry between each color filling or store for future use.
8. Reinsert the cartridge(s) and run a cleaning cycle as per printer instructions.

Note: Immediately refill any empty cartridges.