

Refill Instructions


HP C4841A; C4842A; C4843A; C4844A;

1. Cut label at joint between top and bottom cap of cartridge case.
2. Flip back bottom cap of cartridge.



3. Squeeze sides of cartridge case and carefully wiggle out mylar ink bag and pump assembly from the insert lock.
4. Screw the eyelet screw into the center of the rubber sealing plug, (situated in the filling hole) until a firm grip is made and pull out the plug. (Keep the plug on the end of the eyelet screw.)

5. Inject the ink through the filling hole into the mylar ink bag. (Do not insert the needle more than 1/2" into the bag or else the mylar ink bag may be punctured.)
6. Slowly inject with 30cc of ink (type 12 cartridges will take 55cc) and then reseal by pushing back in the rubber plug. (Push in with the plug on the end of the ball remover screw and then remove the ball remover screw from the ball plug). Or use a new black ball that is enclosed with your refill kit.

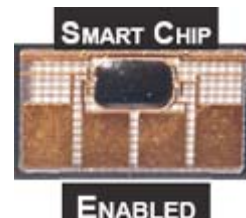

7. Remove the excess air from the mylar ink bag and pump assembly as follows:
 - A. Hold assembly at a 45° angle with outlet hole tube at the top.
 - B. Insert needle of empty injector (with plunger pushed in) into outlet hole tube.
 - C. Press and release pump several times which will expel air into the syringe.
 - D. Pull back the plunger on the syringe to remove any air from the outlet hole tube and then withdraw the needle.
8. Replace the mylar ink bag assembly into the cartridge case and clip the bottom back into position.
9. Install the cartridge back into printer.

Note: This cartridge has a chip that knows its serial number and manufacturer date. It lets the cartridge operate and be refilled for two years then it will stop working. If the cartridge sat on a shelf for 6 months before you bought it then you only have 18 months to use it and refill it as much as you want. The printer will read the serial number off the cartridge and will keep it in memory, even though the cartridge is refilled the printer still remembers that cartridge as one that has been in use. The cartridge will still print fine and the running low warning will eventually go away. The printer can only remember about three serial numbers of each color. The only way to get around this is to have four different cartridges you rotate into the printer. When the first one comes around again the serial number would have dropped off the printers memory and it will think the cartridge is a new one.

Note: Immediately refill any empty cartridges.