

Refill Instructions HP C6578DN/AN;

1. The filling holes are located on the top of the cartridge and are sealed with small plastic plugs. These must be removed by pushing them into the cartridge using a pointed instrument. (A ball point pen works well or a push pin)..

2. Don't go by the label on the front of the cartridge when putting in ink, it's not in the correct order. Go by our diagram here. You can also stick the long needle in a chamber and wipe it with a paper towel to verify the correct color chamber.





3. Fill the syringe with 10cc of ink. Insert the filling needle into the filler hole of the color to be refilled (see diagram) and push downwards into the bottom of the cartridge. Note the cartridge contains a sponge and a slight resistance may be felt.

4. S-l-o-w-l-y inject the first 1cc toward the

bottom then inject the other 9cc s-l-o-w-l-y as you pull the needle up through the sponge. (If all the ink is injected at the bottom where the printhead is, some of the color will seep into another colors chamber and cross contaminate. If this happens it will eventually flush itself out with printing) Do not reseal the filling holes (the original plugs had vents to let air into the cartridge, as ink is used it needs to pull air into the cartridge).

Important: Do not inject the last cc if it is air bubbles

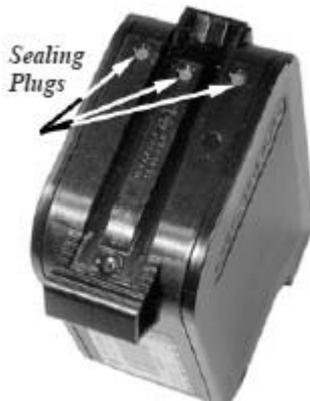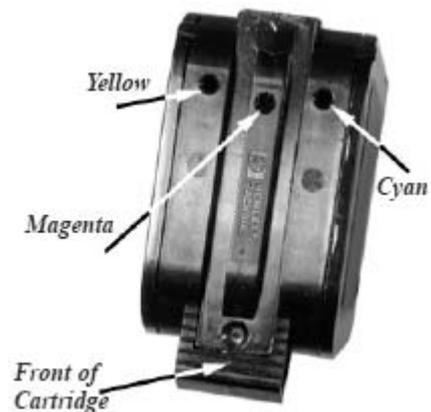

Set above a paper towel for a few minutes as a drip precaution. Do not allow the cartridge to touch the paper, since the paper will draw out the ink.

Note: It is not necessary to reseal the filling holes.

Place the cartridge back into the printer. It is best to fill the cartridge at night just before going to bed and let the cartridge sit in the printer after a refill for 8 hours so the ink can stabilize in the sponges. The next day run 1 - 3 cleaning cycles as per printer instructions.

Note: If the cartridge fails to print, then place the cartridge in the black prime tool.

Attach the luer lock syringe to the prime tool and pull back on the syringe plunger to draw air out of the cartridge. When you see ink enter the prime tool tube, that is enough. Reinstall back into the printer and try to print.

Note: Immediately refill any empty cartridges.