

Refill Instructions

Lexmark 10N0016;


1. Using the eyelet screw included widen the filling hole. (Do not remove the top).



2. Fill the syringe with 8 ml of Cartridge & Print Head Cleaner and inject into the cartridge. Reinsert cartridge into printer and print 5 test pages. See general tips for location of test page.

3. Fill the syringe with ink, insert the filling needle into the filling

hole and push as far down into the cartridge. Inject approximately 12-14 ml of ink slowly or until the reservoir is full. After refilling and running the test pages restore the settings to economy to minimize the ink usage.

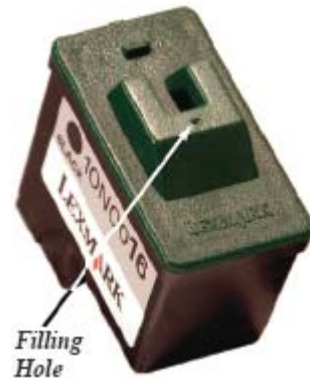

Note: Immediately refill any empty cartridges.